

# MISSION RECLOSABLE

## Reclosable Systems





The Wipak Group helps you to develop economical and ecologically sustainable packages – and to successfully bring them on the market. Numerous innovations are the result of a close and trustful cooperation with our customers and industrial partners.

## From the idea to POS – we ...

- ▶ provide support for all questions concerning **package development**
- ▶ define property profiles in cooperation with you and help you to **select the best materials**
- ▶ make sure that your **packaging ideas** can be realized under technological aspects
- ▶ provide consultation for **print image design**
- ▶ develop and test **sample packages**
- ▶ optimize **packaging processes**
- ▶ ensure that products, films and machines are **ideally adapted** to each other

# IMPULSES FOR INNOVATIVE PACKAGING

State-of-the-art machines, efficient processes, sophisticated services – from pack design to printing – in-depth market know-how and global presence ensure that with our products we provide major contributions to the value added for our customers.

Which packaging concepts are most promising? And how can they be materialized both technologically and economically? What are the ecological and legal aspects to be considered? Benefit from our extensive experience, from our broad spectrum of packaging films and from our multiple refinement options.

Using our own thermoforming and flexoprinting machines we are able to implement even complex designs. Glossy or mat spot painting, metalized and demetalized films, paper and paper-like surfaces or double-printing according to samples – from print image consulting to fully automatic production of printing plates or consistent colour management, we are able to concentrate all activities under the roof of the Wipak Group. For our customers, this ensures efficient, fast and flexible implementation of their projects as well as a constantly high, reproducible quality.

## Added value – our services for you:


- ▶ pack design
- ▶ film development
- ▶ laboratory services
- ▶ printing
- ▶ technical support
- ▶ training and workshops



EFFECTIVE – SAFE – RELIABLE

RECLOSABLE SYSTEMS  
MADE BY WIPAK



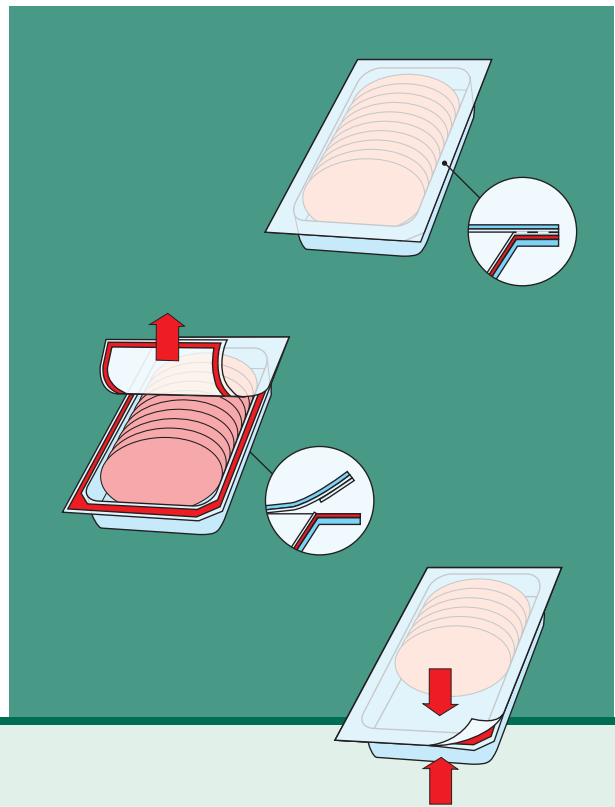


## REPAK

Lidding and forming web are firmly closed together in the sealing area. The lidding film can easily be peeled from the package by means of a pulling tab, exposing the adhesive layer integrated in the tray. A polyester carrier layer, a pressure-sensitive adhesive layer and a sealing layer with integrated migration barrier are the components of the bottom web. The thickness can be between 200 – 500 µm. If required, the adhesive layer can be integrated in any flexible lidding film.

### Benefits

- ▶ Reduced material consumption
- ▶ Robust and durable
- ▶ Practical and economical
- ▶ Lid and tray are forming one unit
- ▶ Neutral in terms of taste and odour
- ▶ Easy to open
- ▶ Can be processed using existing machines



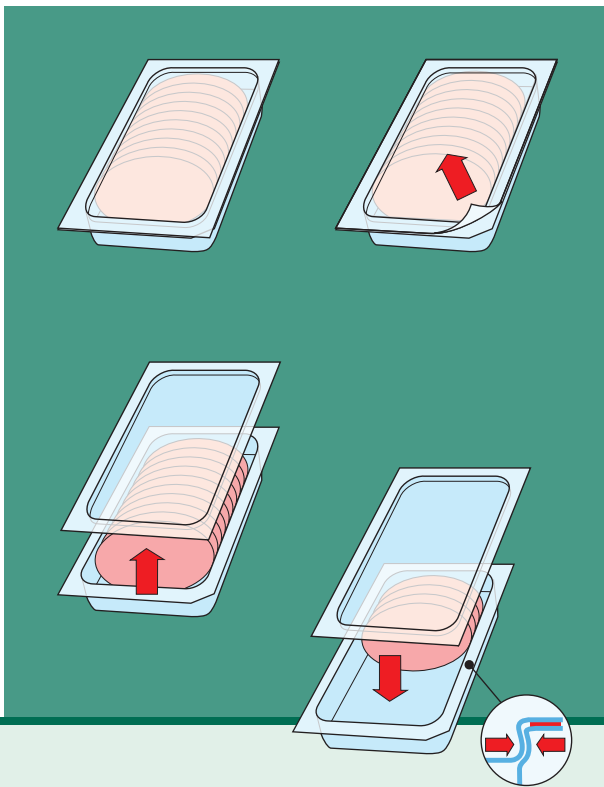


## MULTIPET TPF (TOP WEB FORMING)

Two polyester trays with different depths are pressed one into the other and sealed hermetically. The slightly shallower lid exactly fits into the deeper tray, offering a tight fit thanks to its bulge. Multipet TPF is hermetically closed using a peelable sealing so that it can be reused several times.

### Benefits

- ▶ Large volume yet reduced material consumption
- ▶ Easy to open thanks to protruding corner
- ▶ Self-wedging lid
- ▶ Ideal for stacking
- ▶ Proven system

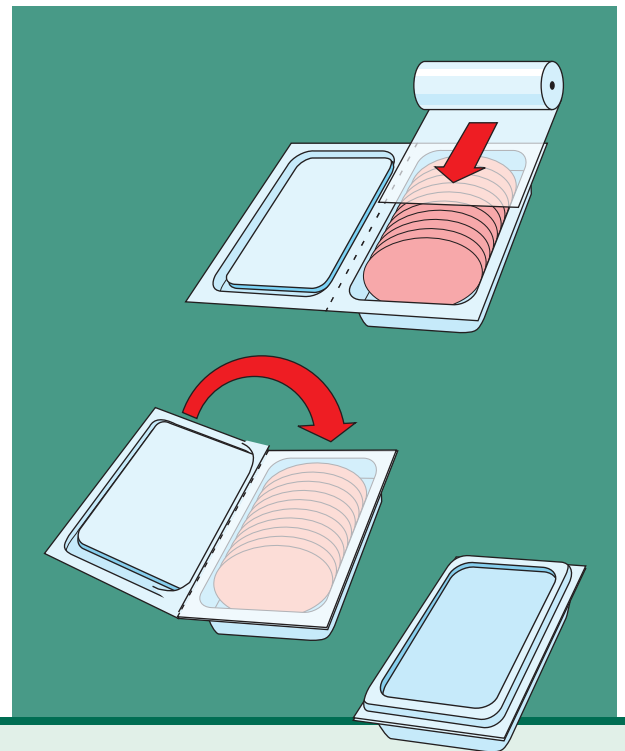


## MULTIPET BOOKLET

As with Multipet TPF, two trays of equal size but of different depths are formed from a semi-rigid Multipet film. The difference: lid and tray are joined. The deeper tray is filled and then sealed using a flexible lidding film. When the package is first used, the lidding film is peeled off completely. The shallower, more convex shaped lid is then folded over and wedged into the package.

### Benefits

- ▶ Lid and tray are joined
- ▶ Flexible lidding film: thin, tight and peelable
- ▶ Excellent product protection
- ▶ Easy handling
- ▶ Robust and stackable
- ▶ High-quality product presentation

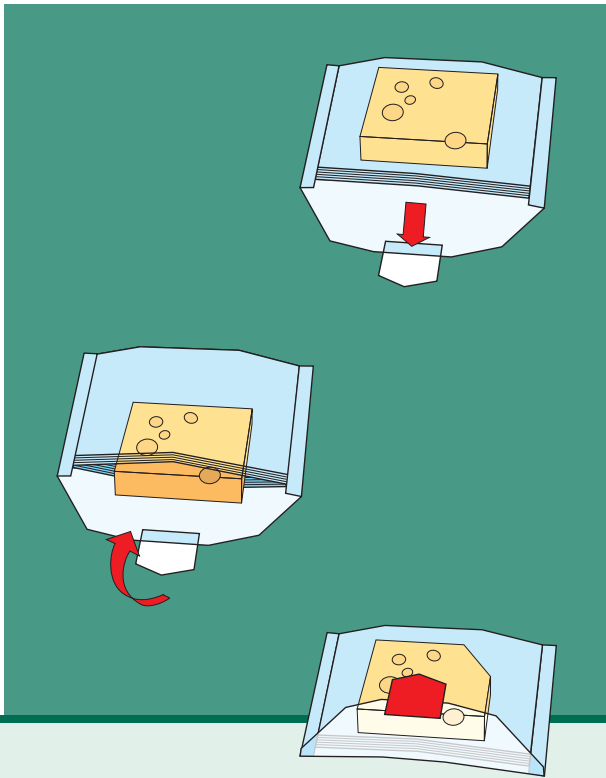


## ENVELOPE PACKAGES

A peelable, asymmetric film is manufactured such that a flap is created on one side of the package. This slightly wider top area is folded over and attached on the back of the package using a self-adhesive label or tape. The system is particularly suited for pieces of cheese as well as larger meat and sausage products.

### Benefits

- ▶ Lightweight and flexible
- ▶ Saves space and material
- ▶ Ideal for packaging large pieces
- ▶ Gas-tight (despite peel layer)
- ▶ High packing rates

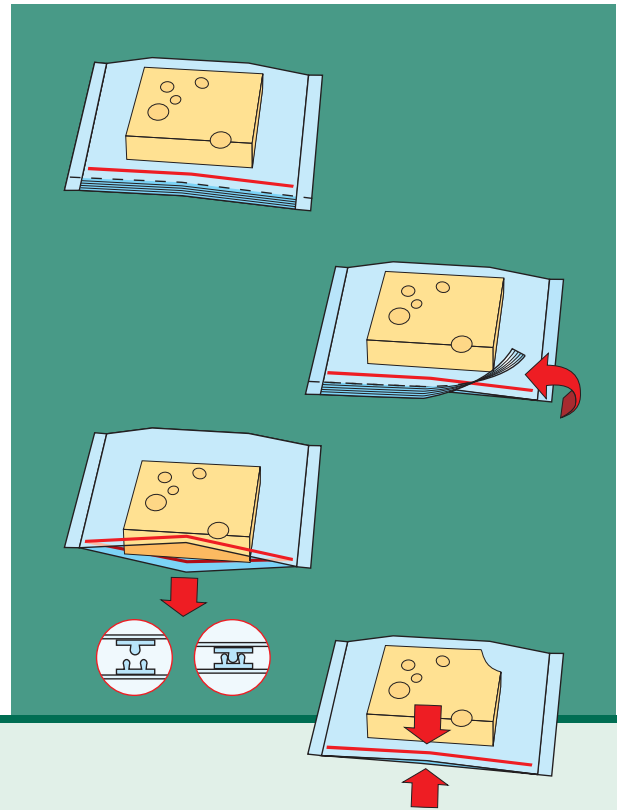

## ZIP CLOSING

Flowpack films can be quickly and safely opened and reclosed several times using a zipper. The “zipper” is integrated in the web during the packaging process, then cut off and sealed onto the film. The carrier film is perforated using a laser for controlled opening. The film properties, such as barrier effect, remain fully intact.

### Benefits

- ▶ Eye-catching due to innovative zipper optic
- ▶ Well suited for larger pieces (e.g. cheese blocks)
- ▶ Packaging under vacuum possible
- ▶ Perforation using laser





## Wipak solutions on the Internet

For further product information and typical applications, please visit  
[www.wipak.com](http://www.wipak.com)

# WIPAK Your Partner in Packaging

### AUSTRIA

Wipak Austria (Sales Office)  
 Tel. +43 664 120 3330  
[info.austria@wipak.com](mailto:info.austria@wipak.com)

### CZECH REPUBLIC

Wipak Prague (Sales Office)  
 Tel. +420 22 05 61 644  
[info.czech@wipak.com](mailto:info.czech@wipak.com)

### FINLAND

Wipak Oy (Manuf. Unit)  
 P. O. Box 45  
 15561 Nastola  
 Tel. +358 20 510 311  
[info.fi.wn@wipak.com](mailto:info.fi.wn@wipak.com)

Biaxis Oy (Manuf. Unit)  
 Teknikonkatu 2  
 15520 Lahti  
 Tel. +358 20 510 312  
[info@biaxis.com](mailto:info@biaxis.com)

Wipak Avans Oy (Manuf. Unit)  
 Teollisuustie 4 B  
 27510 Eura  
 Tel. +358 20 510 311  
[info.fi.wa@wipak.com](mailto:info.fi.wa@wipak.com)

Wipak Valkeakoski Oy (Manuf. Unit)  
 Kaivolankatu 5  
 37630 Valkeakoski  
 Tel. +358 20 510 311  
[info.fi.wv@wipak.com](mailto:info.fi.wv@wipak.com)

### FRANCE

Wipak Gryspeert SAS (Manuf. Unit)  
 Zone des Bois  
 BP 2006 Bousbecque  
 59558 Comines Cédex  
 Tel. +33 320 115 656  
[info.france@wipak.com](mailto:info.france@wipak.com)

### GERMANY

Wipak Walsrode  
 GmbH & Co. KG (Manuf. Unit)  
 Postfach 1661  
 29656 Walsrode  
 Tel. +49 5161 44 3903  
[info.germany@wipak.com](mailto:info.germany@wipak.com)

Wipak Kempten GmbH  
 (Manuf. Unit)  
 Westendstraße 7  
 87488 Betzigau  
 Tel. +49 831 57 1440  
[info.germany@wipak.com](mailto:info.germany@wipak.com)

### HUNGARY

Wipak Budapest (Sales Office)  
 Tel. +36 12 18 51 52  
[info.hungary@wipak.com](mailto:info.hungary@wipak.com)

### ITALY

Wipak Italia S.r.l. (Sales Office)  
 Tel. +39 02 93 92 23 92  
[info@wipak.it](mailto:info@wipak.it)

### JAPAN

Wipak Ltd. Japan Branch  
 (Sales Office)  
 Tel. +81 45 67 07 031  
[kenji.yamajo@wipak.com](mailto:kenji.yamajo@wipak.com)

### NETHERLANDS

Wipak B.V. (Manuf. Unit)  
 Nieuwstadterweg 17  
 6136 KN Sittard  
 Tel. +31 46 420 2999  
[info.belux@wipak.com](mailto:info.belux@wipak.com)

### NORWAY

Wipak Oslo (Sales Office)  
 Tel. +47 22 90 13 10  
[info.norway@wipak.com](mailto:info.norway@wipak.com)

### POLAND

Wipak Polska Sp. z o.o.  
 (Manuf. Unit)  
 Ul. Sikorskiego 20  
 49-340 Lewin Brzeski  
 Tel. +48 77 404 200  
[biuro@maan.opole.pl](mailto:biuro@maan.opole.pl)

### PORTUGAL

Hafri Ltda. (Sales Office)  
 Tel. +351 21 469 1728  
[hafriilda@sapo.pt](mailto:hafriilda@sapo.pt)

### PR CHINA

Wipak Shanghai (Sales Office)  
 Tel. +86 21 54 22 54 05  
[info.china@wipak.com](mailto:info.china@wipak.com)

### RUSSIA

Wipak OOO, Moscow (Sales Office)  
 Tel. +7 499 948 0556  
[info.russia@wipak.com](mailto:info.russia@wipak.com)

Wipak OOO, St. Petersburg  
 (Sales Office)  
 Tel. +7 81 23 36 97 49  
[info.russia@wipak.com](mailto:info.russia@wipak.com)

### SPAIN

Wipak Iberica S.L. (Manuf. Unit)  
 P. I La Creueta, Apdo. Correos 174  
 08130 Santa Perpetua de Mogoda  
 (Barcelona)  
 Tel. +34 935 742 094  
[info.spain@wipak.com](mailto:info.spain@wipak.com)

### SWEDEN

Wipak AB (Sales Office)  
 Tel. +46 40 19 16 00  
[info.sweden@wipak.com](mailto:info.sweden@wipak.com)

### SWITZERLAND

Key Customer Manager  
 Tel. +41 79 929 51 21  
[francesco.rosa@wipak.com](mailto:francesco.rosa@wipak.com)

### TURKEY

Wipak Türkiye (Sales Office)  
 Tel. +90 21 67 00 17 92  
[kayhan.kaya@wipak.com](mailto:kayhan.kaya@wipak.com)

### UNITED KINGDOM

Wipak UK Ltd. (Manuf. Unit)  
 Buttington Business Park  
 Welshpool, Powys, SY21 8SL  
 Tel. +44 1938 555 255  
[info.uk@wipak.com](mailto:info.uk@wipak.com)

[www.wipak.com](http://www.wipak.com)  
[info@wipak.com](mailto:info@wipak.com)